

















**Rosette für Waschtisch-Dreilochbatterie Ø 59 x Ø 27,5 x 9 mm - Messing
gebürstet (23kt Gold)**

ERSATZTEILE

09 28 10 140



	Messing gebürstet (23kt Gold)	09 28 10 140-28
	Chrom	09 28 10 140-00
	Platin gebürstet	09 28 10 140-06
	Platin	09 28 10 140-08
	Messing (23kt Gold)	09 28 10 140-09
	Weiß matt	09 28 10 140-10
	Dark Brass matt	09 28 10 140-16
	Dark Bronze matt	09 28 10 140-17
	Dark Chrome	09 28 10 140-19
	Light Gold gebürstet	09 28 10 140-27
	Schwarz matt	09 28 10 140-33
	Dark Brass gebürstet	09 28 10 140-39
	Bronze gebürstet	09 28 10 140-42
	Champagne gebürstet (22kt Gold)	09 28 10 140-46
	Champagne (22kt Gold)	09 28 10 140-47
	Cyprum	09 28 10 140-49
	Chrom gebürstet	09 28 10 140-93
	Dark Platinum gebürstet	09 28 10 140-99



Rosette für Waschtisch-Dreilochbatterie Ø 59 x Ø 27,5 x 9 mm - Messing
gebürstet (23kt Gold)

ERSATZTEILE

09 28 10 140



Rosette für Waschtisch-Dreilochbatterie Ø 59 x Ø 27,5 x 9 mm - Messing
gebürstet (23kt Gold)

ERSATZTEILE

09 28 10 140