 


 


 






 








Zugstange für Umstellung Ø 12 x 70 mm - Chrom

ERSATZTEILE

09 31 09 102 20



	Chrom	09 31 09 102 20-00
	chrom gebürstet (04)	09 31 09 102 20-04
	Platin gebürstet	09 31 09 102 20-06
	Platin	09 31 09 102 20-08
	Weiß matt	09 31 09 102 20-10
	Dark Brass matt	09 31 09 102 20-16
	Dark Bronze matt	09 31 09 102 20-17
	Dark Chrome	09 31 09 102 20-19
	Light Gold	09 31 09 102 20-26
	Light Gold gebürstet	09 31 09 102 20-27
	Messing gebürstet (23kt Gold)	09 31 09 102 20-28
	Schwarz matt	09 31 09 102 20-33
	Dark Brass gebürstet	09 31 09 102 20-39
	Bronze gebürstet	09 31 09 102 20-42
	Champagne gebürstet (22kt Gold)	09 31 09 102 20-46
	Champagne (22kt Gold)	09 31 09 102 20-47
	Cyprum	09 31 09 102 20-49
	Chrom gebürstet	09 31 09 102 20-93
	Dark Platinum gebürstet	09 31 09 102 20-99



Zugstange für Umstellung Ø 12 x 70 mm - Chrom

ERSATZTEILE

09 31 09 102 20



Zugstange für Umstellung Ø 12 x 70 mm - Chrom

ERSATZTEILE

09 31 09 102 20