
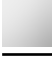











04 20 89 010 10



| | | |
|---|---------------------------------------|--------------------|
|  | Messing gebürstet (23kt Gold) | 04 20 89 010 10-28 |
|  | Chrom | 04 20 89 010 10-00 |
|  | Platin gebürstet | 04 20 89 010 10-06 |
|  | Platin | 04 20 89 010 10-08 |
|  | Weiß matt | 04 20 89 010 10-10 |
|  | Dark Chrome | 04 20 89 010 10-19 |
|  | Schwarz matt | 04 20 89 010 10-33 |
|  | Champagne gebürstet (22kt Gold) | 04 20 89 010 10-46 |
|  | Champagne (22kt Gold) | 04 20 89 010 10-47 |
|  | Chrom gebürstet | 04 20 89 010 10-93 |
|  | Dark Platinum gebürstet | 04 20 89 010 10-99 |



Griff 70 x 70 x 43 mm - Messing gebürstet (23kt Gold)

ERSATZTEILE

04 20 89 010 10



Griff 70 x 70 x 43 mm - Messing gebürstet (23kt Gold)

ERSATZTEILE

04 20 89 010 10